

Heat/Cool Temperature Controller

1/4 DIN - 96 x 96

Q1 line

Quick Guide • ISTR-FQ1ENG02



viale Indipendenza 56, 27029 - Vigevano (PV)
Tel.: +39 0381 698 71, Fax: +39 0381 698 730
internet site: www.ascontecnologic.com
E-mail: sales@ascontecnologic.com

Declaration of Conformity and Manual retrieval

Q1 is panel mounting, Class II instrument. It has been designed with compliance to the European Directives.
All information about the controller use can be found in the User Manual: **MIU_Q1_EN.pdf**.
The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site: **www.ascontecnologic.com**
Once connected to the web-site, search: **Q1**
then click on **Q1** from the result list.
In the lower part of the product page (in any language) is present the download area with links to the documents available for the controller (in the available languages).

Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life and misuse are not covered by this warranty.

Configuration Code


A 4 + 4 digits index code follows the model (letters from I... R). This code must be set to configure the controller. Using UP (▲) and DOWN (▼) keys insert the desired configuration code. When not configured the 1st part of the code is 9999.

Input type and range	I	L	
TR Pt100 IEC751	-99.9...300.0°C	-99.9...572.0°F	0 0
TR Pt100 IEC751	-200...600°C	-328...1112°F	0 1
TC L Fe-Const DIN43710	0...600°C	32...1112°F	0 2
TC J Fe-Cu45% Ni IEC584	0...600°C	32...1112°F	0 3
TC T Cu-CuNi	-200...400°C	-328...752°F	0 4
TC K Chromel-Alumel IEC584	0...1200°C	32...2192°F	0 5
TC S Pt10%Rh-Pt IEC584	0...1600°C	32...2912°F	0 6
TC R Pt13%Rh-Pt IEC584	0...1600°C	32...2912°F	0 7
TC B Pt30%Rh Pt6%Rh IEC584	0...1800°C	32...3272°F	0 8
TC N Nichrosil-Nisil IEC584	0...1200°C	32...2192°F	0 9
TC E Ni10%Cr-CuNi IEC584	0...600°C	32...1112°F	1 0
TC Ni-NiMo18%	0...1100°C	32...2012°F	1 1
TC W3%Re-W25%Re	0...2000°C	32...3632°F	1 2
TC W5%Re-W26%Re	0...2000°C	32...3632°F	1 3
Dc input 0...50mV linear	Engineering and units		1 4
Dc input 10...50mV linear	Engineering and units		1 5
Custom input and range [1]			1 6


[1] For instance, other thermocouples types, ΔT (with 2 Pt100), custom linearisation etc.

Description and dimensions


Depth: 110 mm

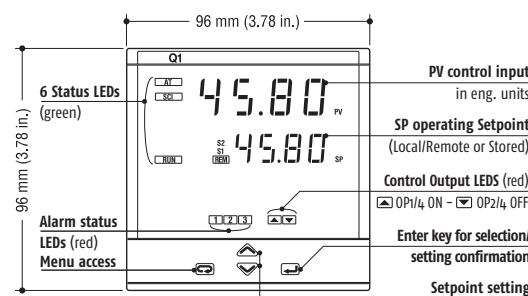


Panel cut out and mounting

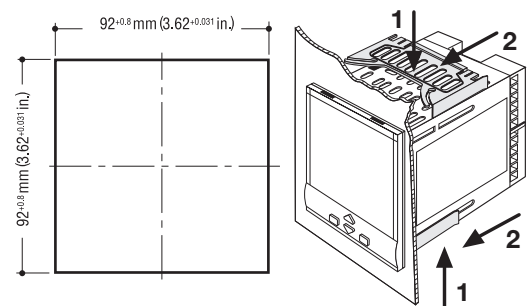

Electrical connections

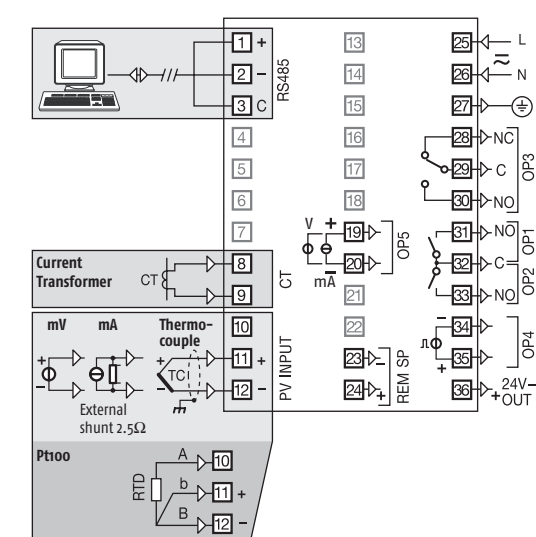

Terminals

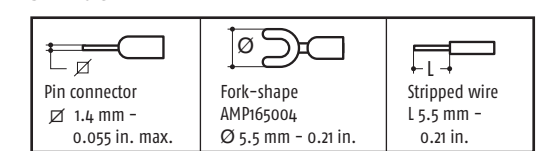

Model Code

The product code indicates the specific hardware configuration of the instrument, that can be modified by specialized engineers only.

Line	Basic	Accessories	Configuration 1st part	Configuration 2nd part
Model:	Q1	ABCD-E900	I L M N	OPQR
Line	Q	1		
Power supply	A			
100...240Vac (-15...+10%)		3		
24Vac (-25...+12%) or 24Vdc (-15...+25%)		5		
Outputs OP1 - OP3	B			
Relay - Relay - SSR Drive		1		
Relay - Relay - Relay		9		
Serial Communications	C			
None		0		
RS485 Modbus/Jbus SLAVE		5		
Options	D			
None		0		
Analogue output + Remote Setpoint		5		
Setpoint Programmer - special function	E			
Not fitted		0		
Start-up + Timer		2		

Controller configuration chart

The present chart includes only the basic parameters
For the list and the description of all the controller parameters see the User Manual.
When the controller is new and not configured shows the code 9999 at power ON. In this case NO PASSWORD is needed to configure the instrument (see the grey box in the chart below). Enter the configuration code in accordance with the desired functional characteristics.

Warning! If the parameter **CodeP** has previously set to a value ≥ 5000 , (for example 5033 in the chart) the controller is locked in operator mode; insert the correct password to access both the parameter and the configuration menus.

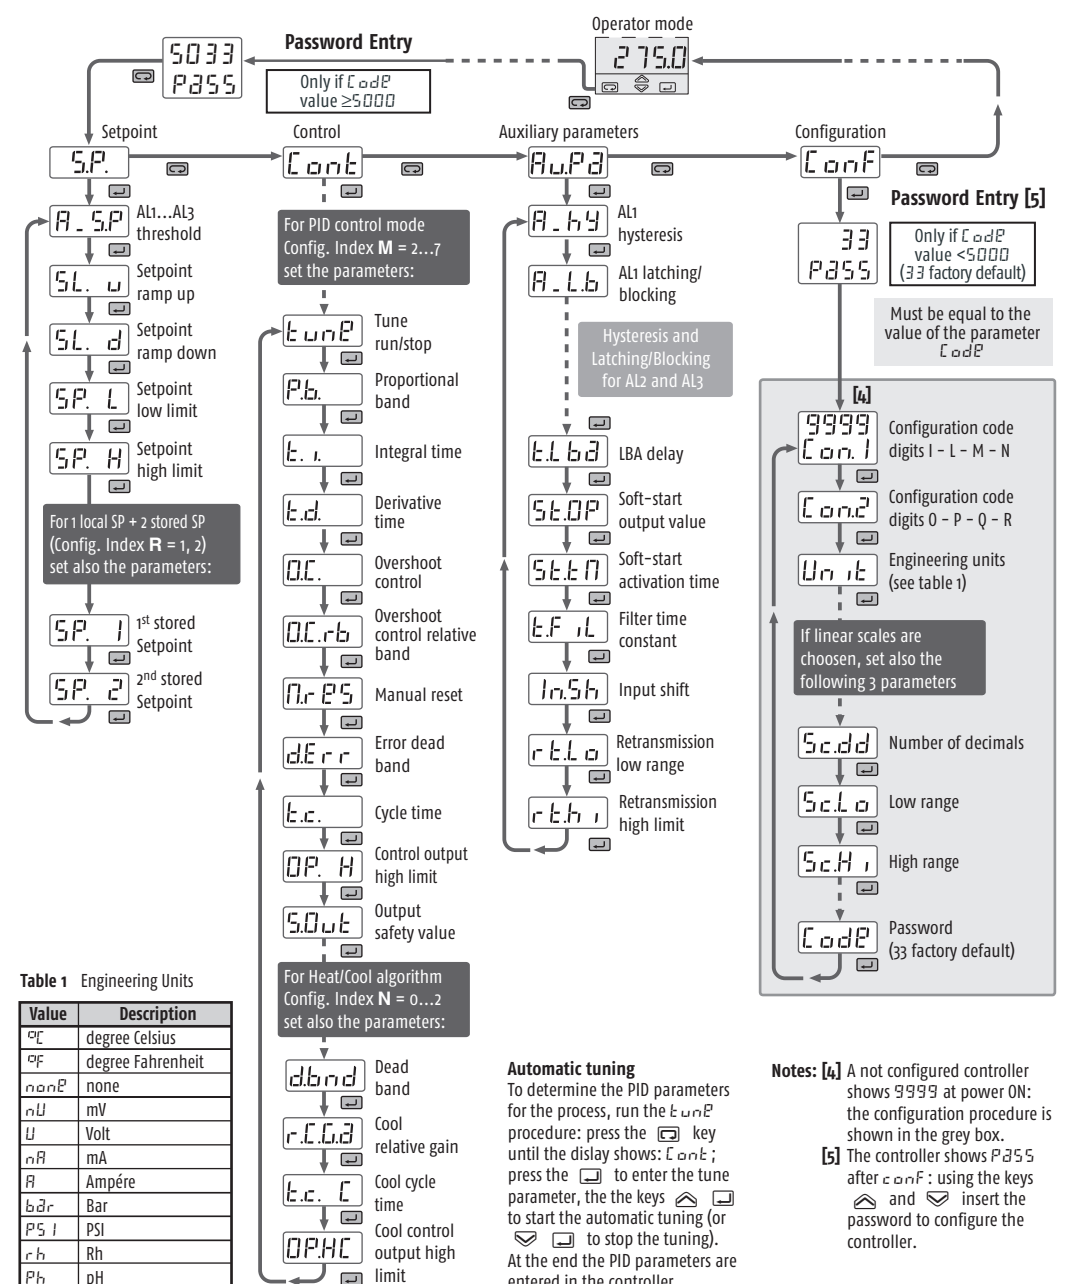


Table 1 Engineering Units

Value	Description
°C	degree Celsius
°F	degree Fahrenheit
none	none
mV	mV
V	Volt
mA	mA
A	Ampère
bar	Bar
PSI	PSI
Rh	Rh
pH	pH

Parameter list

The parameters pointed out with grey background are those necessary to configure the options and are NOT shown in the configuration chart. All the parameters are fully described and explained in the user manual of the controller.

Code	Parameter Name	Value	
		Default	User
Con. 1	1st Configuration code	9999	
Con. 2	2nd Configuration code	0000	
Unit	Engineering units	NONE	
Sc.d	Decimal point	0	
Sc.L	Low range for engineering units	0	
Sc.H	High range for engineering units	9999	
RS.In	Remote Setpoint input range	4...20	
H.F.S	Current transformer range	OFF	
Prot	Communications protocol	MBUS	
Baud	Baud rate	9600	
OP.H	Control output high limit	100.0	
CodeP	Password	33	
L.R	Local/Remote Setpoint Selection	LOCAL	
SEL	Stored Setpoint Selection	NONE	
AL1	AL1 alarm threshold	0	
AL2	AL2 alarm threshold	0	
AL3	AL3 alarm threshold	0	
S.L	Slope up	OFF	
S.D	Slope down	OFF	
SP.L	Setpoint low limit	PV.LO	
SP.H	Setpoint high limit	PV.HI	
SP.1	1st stored Setpoint	0	
SP.2	2nd stored Setpoint	0	
RE	Ratio remote Setpoint	1.00	
B.RS	Bias Remote Setpoint	0	
HY	Control output hysteresis	0.5	
STOP	Start/Stop One shot tuning (0=Stop 1=Run)	STOP	
PB	Proportional band (Hysteresis ON - OFF)	5.0	
I	Integral time	5.0	
D	Derivative time	1.00	

Code	Parameter Name	Value	
		Default	User
OC	Overshoot Control	1.0	
OC.r.b	Overshoot Control relative band	0.5	
MR	Manual reset	50	
EDB	Error Dead Band	OFF	
CT	Output Cycle time	20	
OP.H	Control output high limit	100.0	
SOV	Output safety value	0	
DBD	Heat/Cool Dead band	0.5	
RCG	Relative Cooling Gain	1.0	
HY.C	Cool output Hysteresis	0.5	
CT.C	Cool cycle time	20	
OP.HC	Cool output maximum value	100.0	
AL1.H	AL1 Alarm Hysteresis	0.5	
AL1.L	AL1 latching and blocking functions	NONE	
AL2.H	AL2 Alarm Hysteresis	0.5	
AL2.L	AL2 latching and blocking functions	NONE	
AL3.H	AL3 Alarm Hysteresis	0.5	
AL3.L	AL3 latching and blocking functions	NONE	
L.B.D	LBA delay	OFF	
SOV.H	Soft start output high value	0.5	
SOV.T	Soft start time	1	
IF	Input filter	OFF	
IN.SH	Input shift	OFF	
ADDR	Serial communications address	247	
RE.L	Retransmission low range	PV.LO	
RE.H	Retransmission high range	PV.HI	
EMOD	Timer/Start-up operating mode	OFF	
TA	Timer Action	OFF	
TS	Timer Setting	0.5	
SP.SB	Stand-by Setpoint	0	
HS.H	Hold time	1	
SP.SU	Start-Up Setpoint	0	
OP.HS	Output high limit during Start-up	100.0	

Notes: [4] A not configured controller shows 9999 at power ON: the configuration procedure is shown in the grey box.
[5] The controller shows PASS after CONF: using the keys ▲ and ▼ insert the password to configure the controller.