

Heat/Cool Temperature Controller

1/8 DIN - 48 x 96

X1 line

Quick Guide • ISTR-FX1ENG02



viale Indipendenza 56, 27029 - Vigevano (PV)
Tel.: +39 0381 698 71, Fax: +39 0381 698 730
internet site: www.ascontecnologic.com
E-mail: sales@ascontecnologic.com



Declaration of Conformity and Manual retrieval

X1 is panel mounting, Class II instrument. It has been designed with compliance to the European Directives.
All information about the controller use can be found in the User Manual: **MIU_X1_EN.pdf**.
The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site:
www.ascontecnologic.com
Once connected to the web-site, search: **X1**
then click on **X1** from the result list.
In the lower part of the product page (in any language) is present the download area with links to the documents available for the controller (in the available languages).

Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life and misuse are not covered by this warranty.

Configuration Code


A 4 + 4 digits index code follows the model (letters from I... R). This code must be set to configure the controller. Using UP (▲) and DOWN (▼) keys insert the desired configuration code. When not configured the 1st part of the code is 9999.

Input type and range	I	L	
TR Pt100 IEC751	-99.9...300.0°C	-99.9...572.0°F	0 0
TR Pt100 IEC751	-200...600°C	-328...1112°F	0 1
TC L Fe-Const DIN43710	0...600°C	32...1112°F	0 2
TC J Fe-Cu45% Ni IEC584	0...600°C	32...1112°F	0 3
TC T Cu-CuNi	-200...400°C	-328...752°F	0 4
TC K Chromel-Alumel IEC584	0...1200°C	32...2192°F	0 5
TC S Pt100%Rh-Pt IEC584	0...1600°C	32...2912°F	0 6
TC R Pt13%Rh-Pt IEC584	0...1600°C	32...2912°F	0 7
TC B Pt30%Rh Pt6%Rh IEC584	0...1800°C	32...3272°F	0 8
TC N Nichrosil-Nisil IEC584	0...1200°C	32...2192°F	0 9
TC E Ni10%Cr-CuNi IEC584	0...600°C	32...1112°F	1 0
TC Ni-NiMo18%	0...1100°C	32...2012°F	1 1
TC W3%Re-W25%Re	0...2000°C	32...3632°F	1 2
TC W5%Re-W26%Re	0...2000°C	32...3632°F	1 3
Dc input 0...50mV linear	Engineering and units		1 4
Dc input 10...50mV linear	Engineering and units		1 5
Custom input and range [1]			1 6


[1] For instance, other thermocouples types, ΔT (with 2 Pt100), custom linearisation etc.

Description and dimensions


Depth: 10 mm

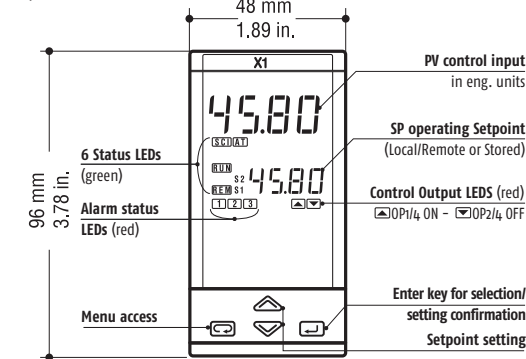


Panel cut out and mounting

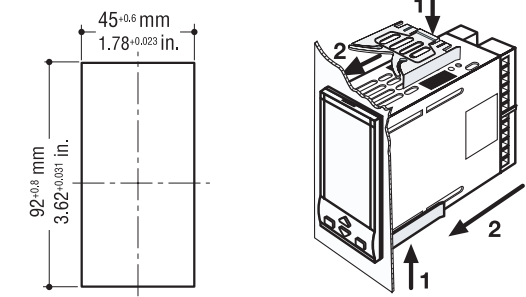

Electrical connections

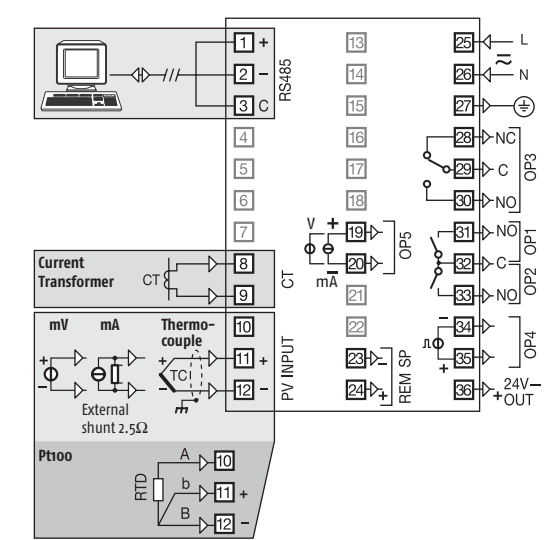

Terminals

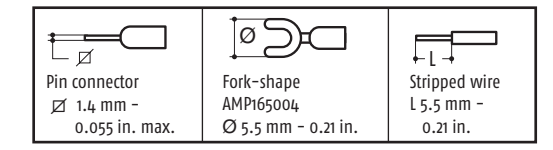

Model Code

The product code indicates the specific hardware configuration of the instrument, that can be modified by specialized engineers only.

Line	Basic	Accessories	1st part	2nd part
Model:	X1	ABCD-E900	ILMN	OPQR
Line	X	1		
Power supply	A			
100...240Vac (-15...+10%)		3		
24Vac (-25...+12%) or 24Vdc (-15...+25%)		5		
Outputs OP1 - OP3	B			
Relay - Relay - SSR Drive		1		
Relay - Relay - Relay		9		
Serial Communications	C			
None		0		
RS485 Modbus/Jbus SLAVE		5		
Options	D			
None		0		
Analogue output + Remote Setpoint		5		
Setpoint Programmer - special function	E			
Not fitted		0		
Start-up + Timer		2		

Control mode	M	
ON-OFF reverse action	0	
ON-OFF direct action	1	
PID single reverse action	2	
PID single direct action	3	
PID double action	Linear cool output	4
	ON-OFF cool output	5
	Water cool output [2]	6
	Oil cool output [2]	7

[2] 2 different correcting methods of the control output are available. One for water and the other for oil:
OP water=100•(OP2/100) 2 - OP oil=100•(OP2/100)1.5

Output Configuration	Double action	N
Relay (OP1)	Heat OP1, Cool OP2	0
SSR drive or relay (OP4)	Heat OP1, Cool OP4	1
-	Heat OP4, Cool OP2	2

Alarms 1, 2 and 3 type and function	O	P	Q
Disabled (or, only for alarm AL3, used by Timer)	0	0	0
Sensor break/Loop break alarm (LBA)	1	1	1
Absolute	active high	2	2
	active low	3	3
Deviation	active high	4	4
	active low	5	5
Band	active out	6	6
	active in	7	7
Heater break by CT [3]	active during ON output state	8	8
	active during OFF output state	9	9

[3] Only possible whether "Output configuration" N = 0 or 1 and H.E.F.S is NOT set to OFF

Setpoint type	R
Local only	0
Local and 2 tracking stored Setpoints	1
Local and 2 Stand-by stored Setpoints	2
Local and Remote (only if option is installed)	3
Local with trim (only with remote Setpoint)	4
Remote with trim (only if option is installed)	5


Controller configuration chart

The present chart includes only the basic parameters

For the list and the description of all the controller parameters see the User Manual.

When the controller is new and not configured shows the code 9999 at power ON. In this case NO PASSWORD is needed to configure the instrument (see the grey box in the chart below). Enter the configuration code in accordance with the desired functional characteristics.

Warning! If the parameter C_{odP} has previously set to a value ≥ 5000 , (for example 5033 in the chart) the controller is locked in operator mode; insert the correct password to access both the parameter and the configuration menus.

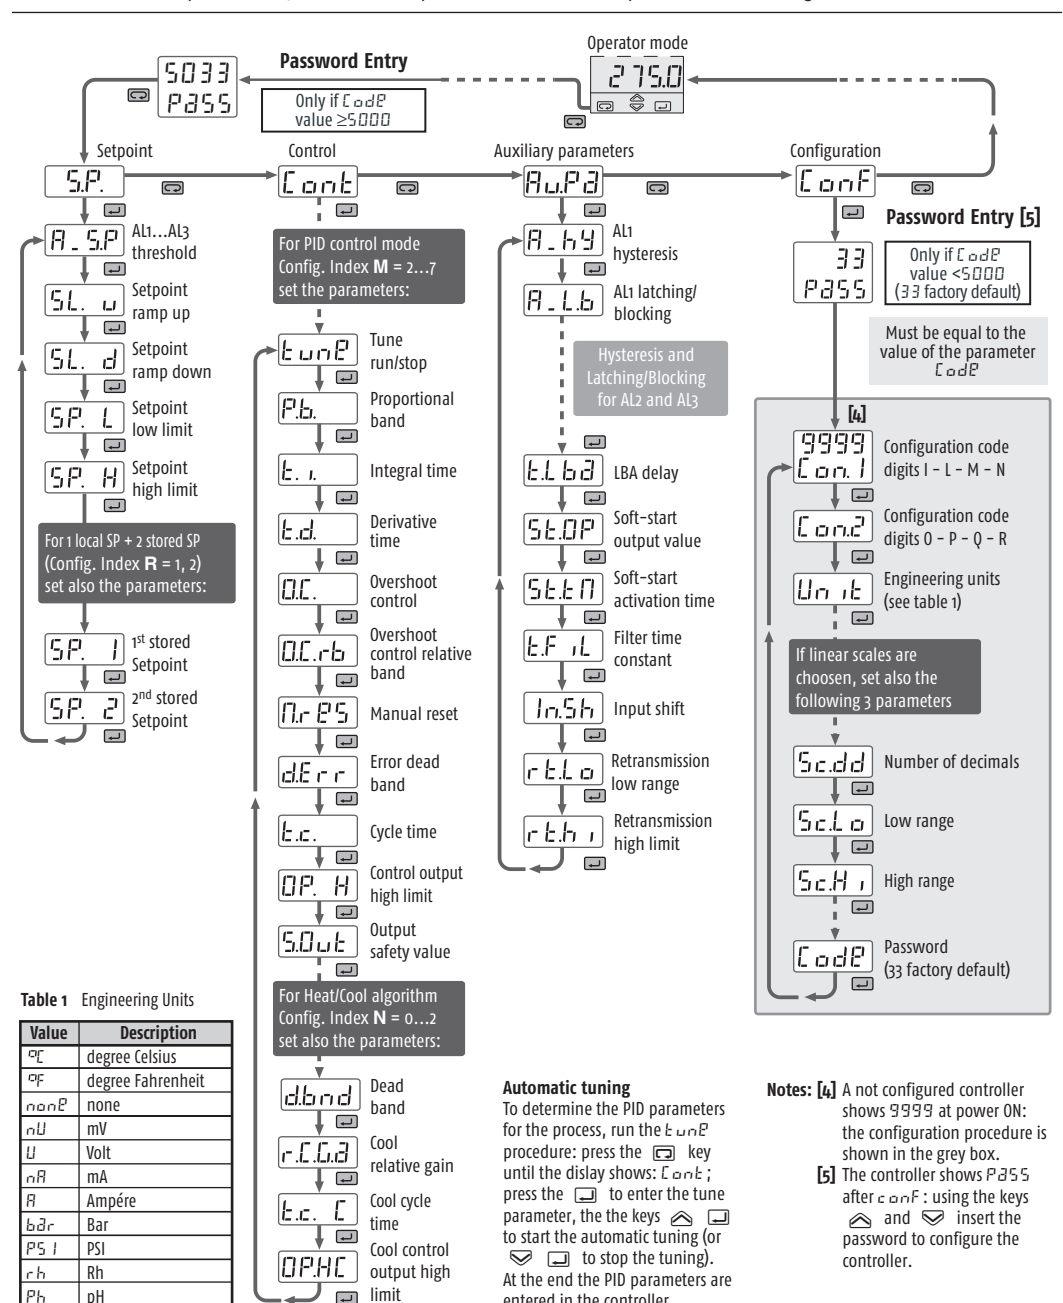

Value	Description
°C	degree Celsius
°F	degree Fahrenheit
none	none
mV	mV
V	Volt
mA	mA
A	Ampère
bar	Bar
PSI	PSI
Rh	Rh
pH	pH

Automatic tuning
To determine the PID parameters for the process, run the t_{unP} procedure: press the \square key until the display shows: C_{ont} ; press the \square to enter the tune parameter, the keys \uparrow and \downarrow to start the automatic tuning (or \square to stop the tuning). At the end the PID parameters are entered in the controller.

Notes: [4] A not configured controller shows 9999 at power ON: the configuration procedure is shown in the grey box.
[5] The controller shows P_{aSS} after C_{onF} : using the keys \uparrow and \downarrow insert the password to configure the controller.

Parameter list

The parameters pointed out with grey background are those necessary to configure the options and are NOT shown in the "Controller Configuration Chart". All the parameters are fully described and explained in the user manual of the controller.

Code	Parameter Name	Value	
		Default	User
$C_{on.1}$	1st Configuration code	9999	
$C_{on.2}$	2nd Configuration code	0000	
U_{nit}	Engineering units	NONE	
$S_{c.d.d}$	Decimal point	0	
$S_{c.L}$	Low range for engineering units	0	
$S_{c.H}$	High range for engineering units	9999	
$r_{S.in}$	Remote Setpoint input range	4...20	
$H.E.F.S$	Current transformer range	OFF	
$b_{a.u.d}$	Baud rate	9600	
$r_{P.e.r}$	Continuous Output range	4...20	
$r_{E.H}$	Retransmitted signal selection	PV	
C_{odP}	Password	33	
$t_{r.u.n}$	Start/Stop Timer	STOP	
$L_{.r}$	Local/Remote Setpoint Selection	LOCAL	
$S_{S.E.L}$	Stored Setpoint Selection	NONE	
$A_{1.S.P}$	AL1 alarm threshold	0	
$A_{2.S.P}$	AL2 alarm threshold	0	
$A_{3.S.P}$	AL3 alarm threshold	0	
$S_{L.u}$	Slope up	OFF	
$S_{L.d}$	Slope down	OFF	
$S_{P.L}$	Setpoint low limit	PV.LO	
$S_{P.H}$	Setpoint high limit	PV.HI	
$S_{P.1}$	1st stored Setpoint	0	
$S_{P.2}$	2nd stored Setpoint	0	
$r_{t.o}$	Ratio remote Setpoint	1.00	
$b_{.r.S}$	Bias Remote Setpoint	0	
h_{y}	Control output hysteresis	0.5	
t_{unP}	Start/Stop One shot tuning (0=Stop 1=Run)	STOP	
P_{b}	Proportional band (Hysteresis ON - OFF)	5.0	
$t_{.i}$	Integral time	5.0	
$t_{.d}$	Derivative time	1.00	

Code	Parameter Name	Value	
		Default	User
$O.C.$	Overshoot Control	1.00	
$O.C.r.b$	Overshoot Control relative band	0.5	
$r_{.r.P.S}$	Manual reset	50.0	
$d.E.r.r$	Error Dead Band	OFF	
$t_{.c}$	Output Cycle time	20	
$O.P.H$	Control output high limit	100.0	
$S_{.o.u.t}$	Output safety value	0.0	
$d.b.a.n.d$	Heat/Cool Dead band	0.5	
$r_{.C.G.B}$	Relative Cooling Gain	1.0	
$h_{.y.C}$	Cool output Hysteresis	0.5	
$t_{.c.C}$	Cool cycle time	20	
$O.P.H.C$	Cool output maximum value	100.0	
$A_{1.H.y}$	AL1 Alarm Hysteresis	0.5	
$A_{1.L.b}$	AL1 latching and blocking functions	NONE	
$A_{2.H.y}$	AL2 Alarm Hysteresis	0.5	
$A_{2.L.b}$	AL2 latching and blocking functions	NONE	
$A_{3.H.y}$	AL3 Alarm Hysteresis	0.5	
$A_{3.L.b}$	AL3 latching and blocking functions	NONE	
$t_{.L.b.d}$	LBA delay	OFF	
$S_{t.o.P}$	Soft start output high value	0.5	
$S_{t.e.n}$	Soft start time	1	
$t_{.f.i.l}$	Input filter	OFF	
$r_{.t.l.o}$	Retransmission low range	PV.LO	
$r_{.t.h.i}$	Retransmission high range	PV.HI	
$t_{.m.o.d}$	Timer/Start-up operating mode	OFF	
$t_{.A.c.t}$	Timer Action	OFF	
$t_{.i.P}$	Timer Setting	0.5	
$S_{.P.S.b}$	Stand-by Setpoint	0	
$t_{.h.S.U}$	Hold time	1	
$S_{.P.S.U}$	Start-Up Setpoint	0	
$O.P.H.S$	Output high limit during Start-up	100.0	